

INSTALLATION PROCEDURE for 2X2, 3x3, 2X4 and 4 x4 (Sheet 1 of 2)


DO NOT DISCARD

PLEASE READ CAREFULLY BEFORE BEGINNING INSTALLATION.


Fixtures must be installed by licensed electricians in accordance with all local and national codes.

To prevent electrical shock, disconnect electrical supply before installing or servicing.

Before Beginning Installation, Locate The Following (3) Components. Gather Required Tools.

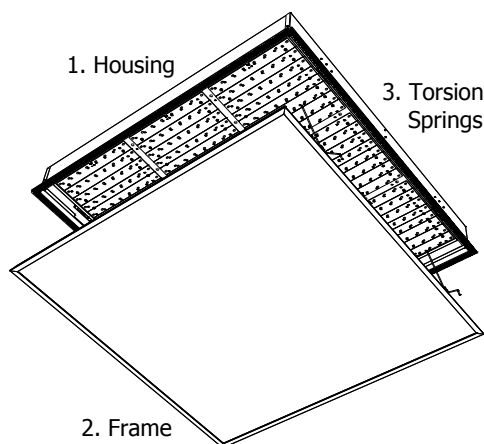

Tools Required (Not Provided)

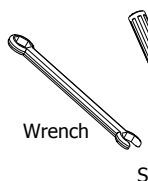

FIXTURE SUPPORTED BY
(4) 1/4-20 RODS (RODS
NOT BY PICASSO).

BLOCKING, CEILING
AND SPACKLE BY
INSTALLING CONTRACTOR.





- NOM, 2 X 2, 3 X 3, 2 X 4 or 4 X 4

Service Hotline: 1-201-246-8188





Monday through Friday 9:00AM - 5:00PM

To Begin Installation:

POWER OFF

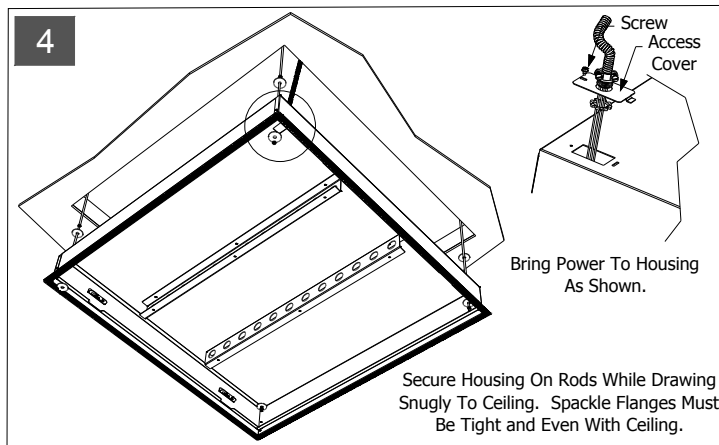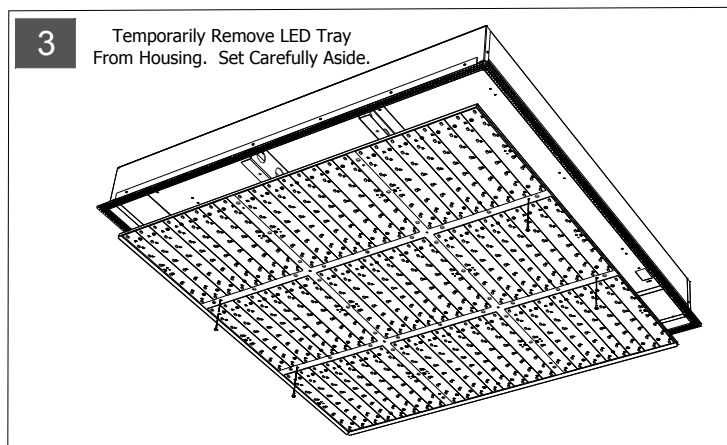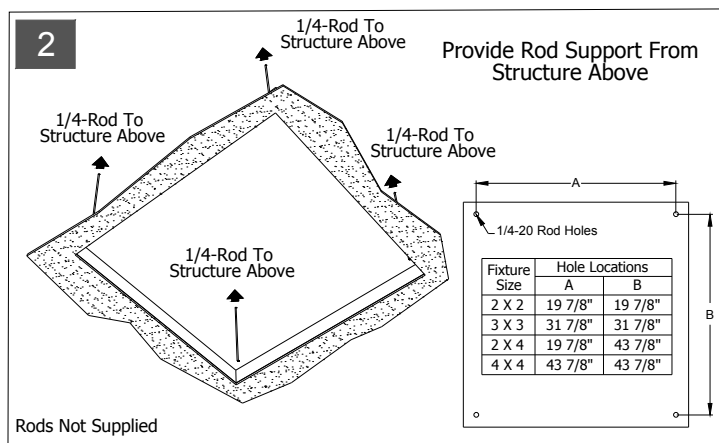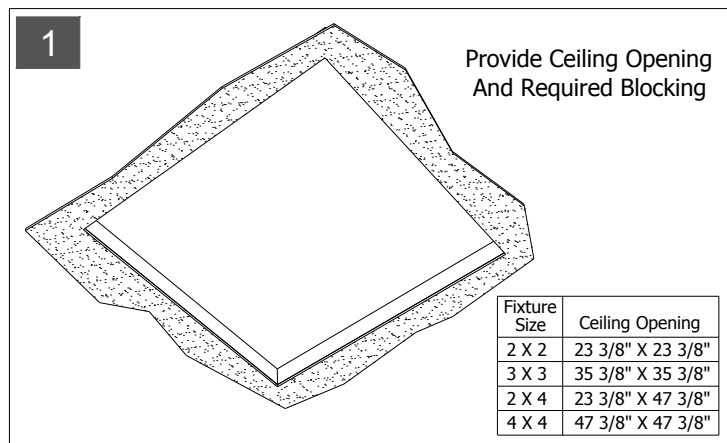


INSTALLATION PROCEDURE for 2X2, 3X3, 2X4 and 4X4 (Sheet 2 of 2)

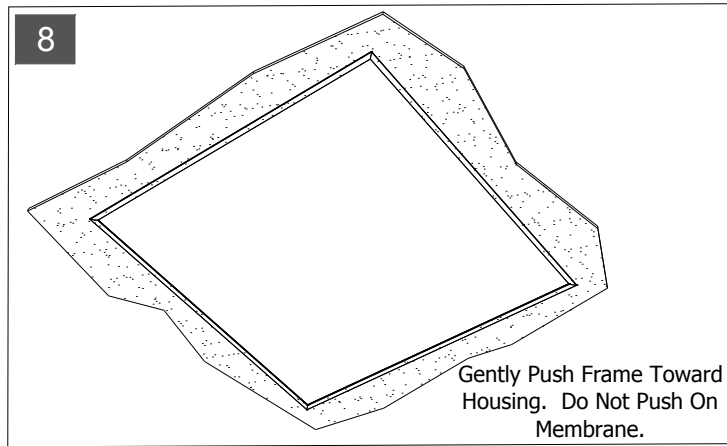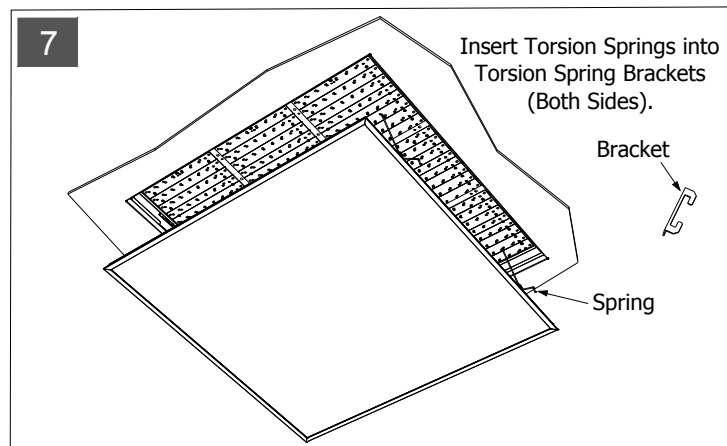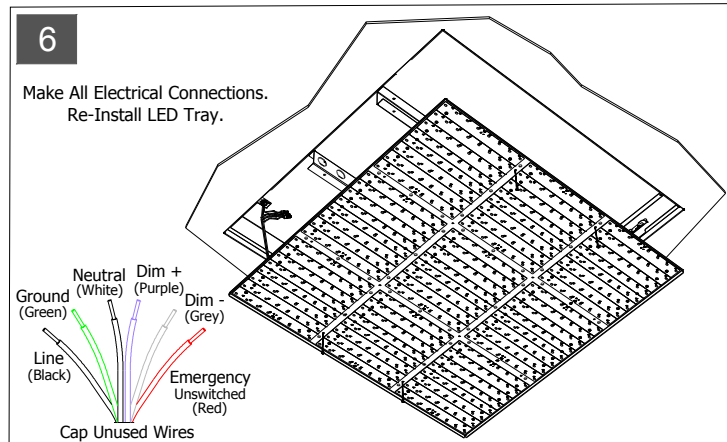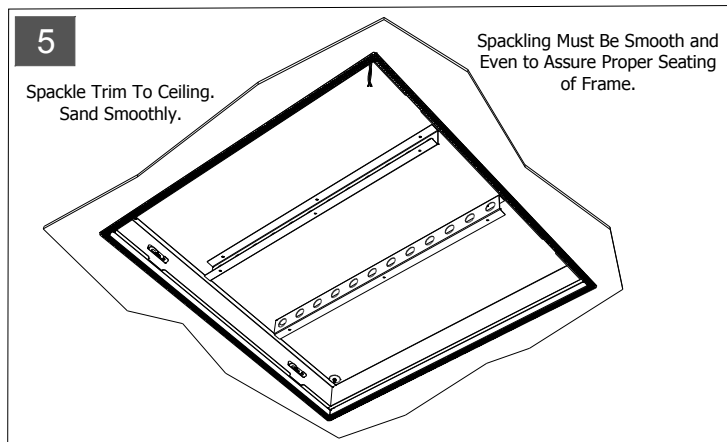


"EM" Battery Pack Activation

POWER OFF

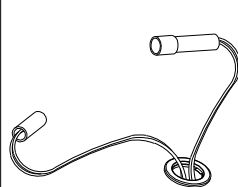

To Maintain "EM" Battery Pack Charge, "EM" Fixtures Provided With "EM" Pack Disconnected As Shown.

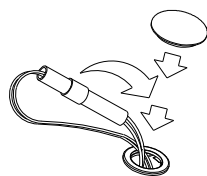

To Activate "EM" Battery Pack, Plug Together As Shown. Insert Wires Into Hole And Cap With Plug Provided.

Service Hotline: 1-201-246-8188
Monday through Friday 9:00AM - 5:00PM

Installation and maintenance of the NUBEZ luminaire may only be performed by qualified and licensed electricians in accordance with all applicable codes and standards.

Picasso Lighting Industries, LLC assumes no responsibility or liability for any unauthorized changes or modifications to the NUBEZ luminaire.

The NUBEZ luminaire is not intended for outdoor use.

Picasso Lighting Industries, LLC. shall assume no responsibility or liability for the integrity of the mounting surface and structure as well as the integrity of all components not provided by Picasso Lighting Industries, LLC.

Turn off line voltage and allow luminaire to completely cool before performing any maintenance including routine cleaning of luminaire.

Avoid touching LED light emitting surfaces while installing, replacing or providing maintenance to the luminaire.

Luminous flux and connected electrical load are subject to an initial tolerance of +/- 10%.

Color temperature (k) is subject to a tolerance of +/- 150k from the nominal value.

Any component contained in this luminaire can only be replaced by the manufacturer or an agent thereof.

Keep these INSTALLATION INSTRUCTIONS in a secure and readily accessible place for any future maintenance or for reference.

DO NOT DISCARD
PLEASE READ CAREFULLY BEFORE BEGINNING INSTALLATION.